



Assembly – Retrofitting of the indicator handlebar ends



Position the indicator switch rubber on original gear tube and mark out 3 holes.



Drill 2.5mm screw holes to feed the cable through (approx. 10mm drill bit).



Cut M3 thread with thread cutter into two holes.




Fit indicator switch rubber, feed through cable and affix to the indicator switch.




Fit cover and bolt down indicator switch.



In the case of models without indicator inner tubes, drill a hole to affix the indicators (e.g. 6mm).

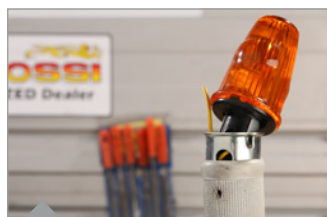

Connect indicator handlebar ends and place with bushing in the steering column tube.

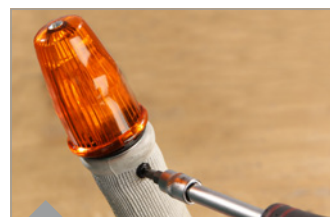

Screw down the indicator handlebar ends with a wood screw (approx. 5mm), optionally also under the grips.